MultiPASS 1000

PARTS CATALOG

Canon

Canon

FIGURE 1 PACKAGE CONTENTS

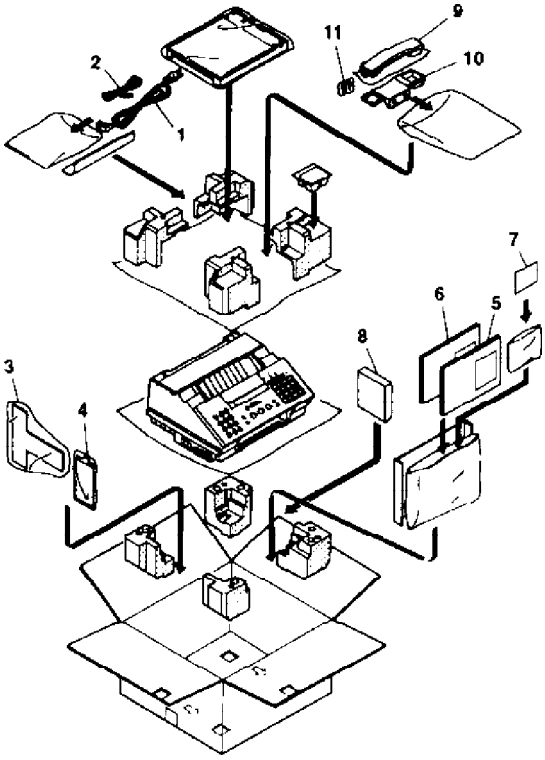

NUM.	PART #	DESCRIPTION
1-1	WT3-0057-000	POWER SUPPLY CORD 125V
2	HH2-2484-000	MODULAR LINE CORD, 2W
3	HB1-1010-000	TRAY, RECORDING PAPER
4	HB1-0212-000	TRAY, DOCUMENT
5	HT1-2044-000	INSTRUCTION BOOK (ENG)
6	HT1-2047-000	INSTRUCTION BOOK, DRIVER(ENG)
7	HB1-1395-000	SHEET, ONE·TOUCH DIAL
8	HG5-0604-000	DRIVER SOFTWARE
9	HG1-2185-050	HANDSET ASSY (USA, AG)
10	HA2-2128-000	HOLDER, HANDSET
11	XA9-0718-000	SCREW, HANDSET HOLDER (2)

FIGURE 2 UPPER COVER ASS'Y

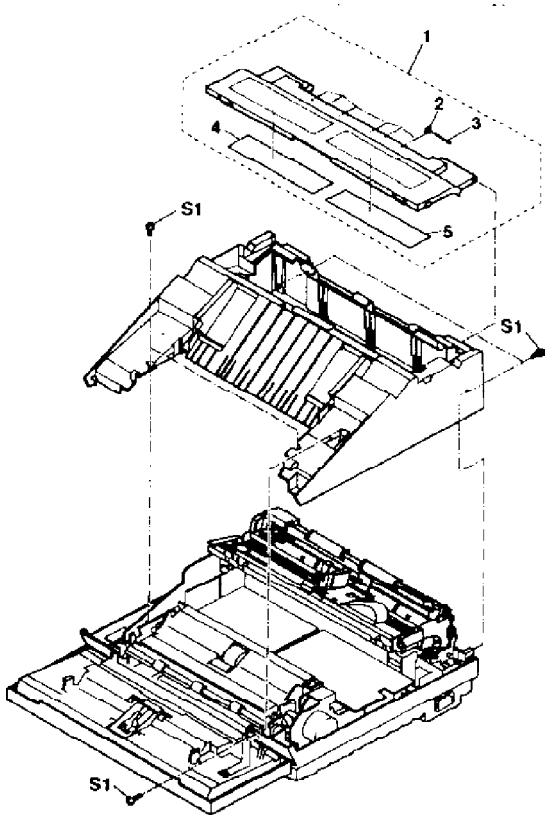

NUM.	PART #	DESCRIPTION
2-1	HG5-0472-000	PRINTER COVER ASSY
2	QB1-0517-000	SPUR (6)
3	QB1-0518-000	SPUR SHAFT (6)
4	HA2-2726-000	LABEL, CARTRIDGE Ul
5	HA2-2725-000	LABEL, CARTRIDGE U2

FIGURE 3 SCNT & INTERFACE BOARD ASS'Y

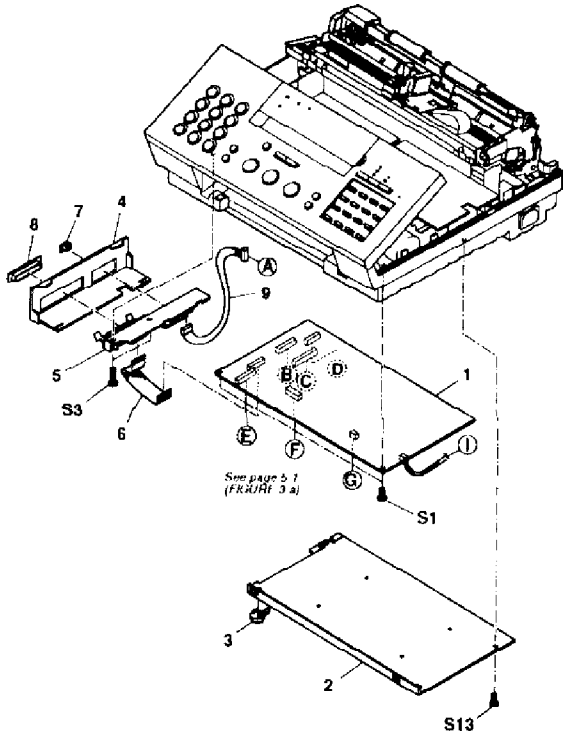

NUM.	PART #	DESCRIPTION
3-1	HG1-4254-000	SCNT BOARD ASSY
2	HB1-0214-080	COVER, BOTTOM
3	HF5-0011-030	RUBBER FOOT UNIT (2)
4	HB1-0213-000	COVER, MODULAR
5	HG1-4227-000	INTERFACE BOARD ASSY
6	HH2-2350-000	FLAT CABLE
7	WS9-5038-000	SPACER, MODULAR
8	QA2-0503-000	CAP, CONNECTOR
9	HH2-2297-000	CABLE WITH CONNECTOR, 7P

FIGURE 4 OPERATION PANEL ASS'Y & ADF ASS'Y, UPPER

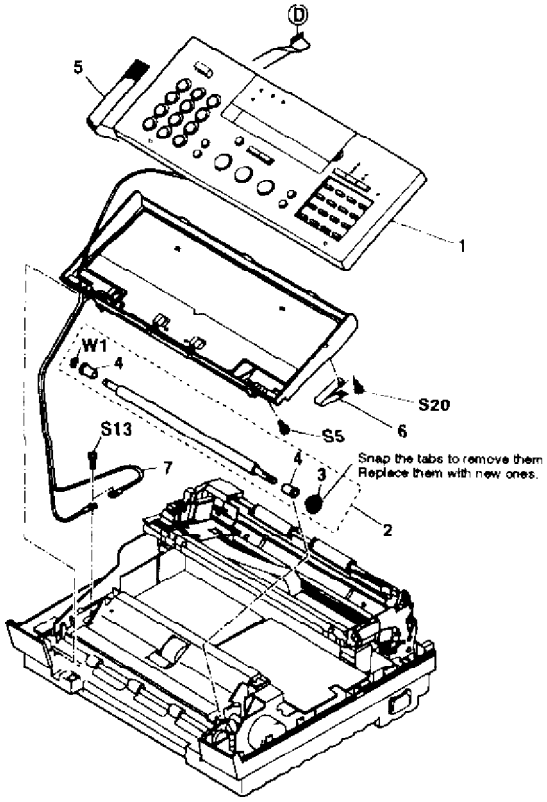

NUM.	PART #	DESCRIPTION
4-1	HG5-0460-000	OPERATION PANEL ASSY
2	HG5-0064-000	CS ROLLER ASSY
3	HS5-0024-000	GEAR, 21T
4	HS5-1006-000	BUSHING (2)
5	HH2-2349-020	FLAT CABLE
6	HB1-0262-000	BELT, STOPPER
7	HH2-2487-000	WIRE, GROUND

FIGURE 5 PRINTER ASS'Y

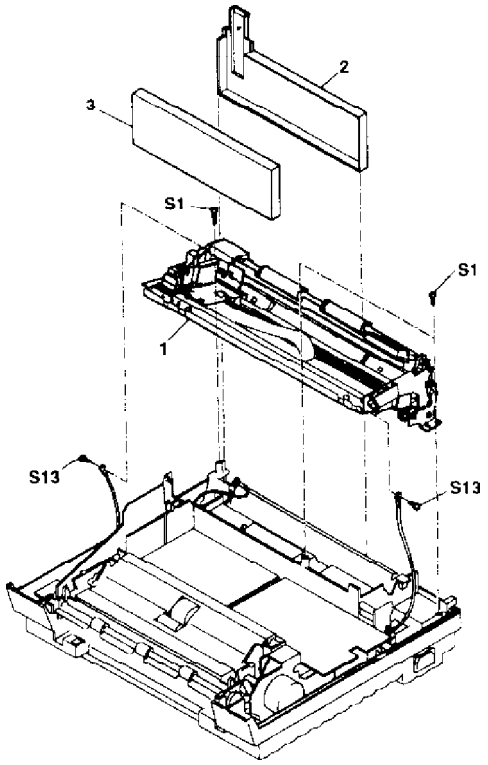

NUM.	PART #	DESCRIPTION
5-1	HG5-0071-000	PRINTER ASSY
2	HB1-0319-020	TRAY, WASTE INK
3	HB1-0320-000	ABSORBER, WASTE INK

FIGURE 6 ADF, LOWER

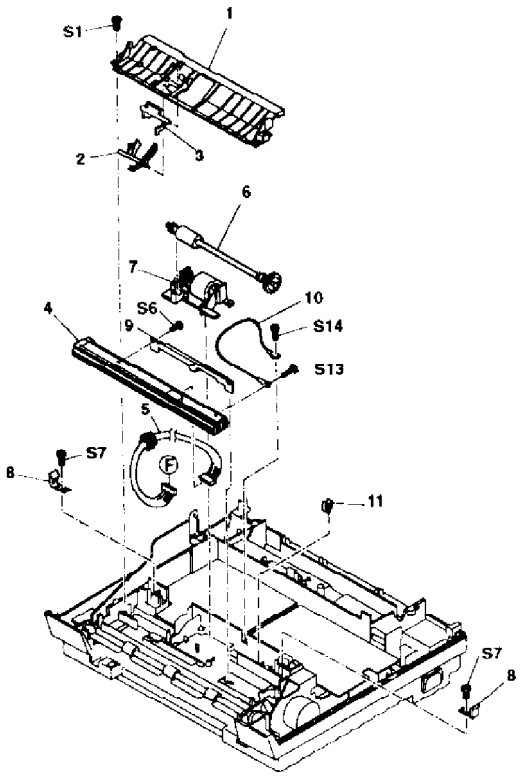

NUM.	PART #	DESCRIPTION
6-1	HB1-0231-000	COVER, DOCUMENT GUIDE, LOWER
2	HB1-0233-000	ARM, DETECTION
3	HB1-0232-000	ARM, DETECTION
4	HH7-2115-000	CONTACT SENSOR
5	HH2-2351-000	CABLE WITH CONNECTER, 10P
6	HG5-0063-000	FEED ROLLER ASSY
7	HG5-0058-020	SEPARATION ROLLER ASSY
8	HF1-0913-000	LOCK, OPERATION PANEL UNIT (2)
9	HB1-1357-000	PLATE, POSITIONING
10	HH2-2344-000	CABLE WITH RING TONGUE
11	WT2-0387-000	CLAMP

FIGURE 7 NCU & DRIVER BOARD ASS'Y, POWER SUPPLY

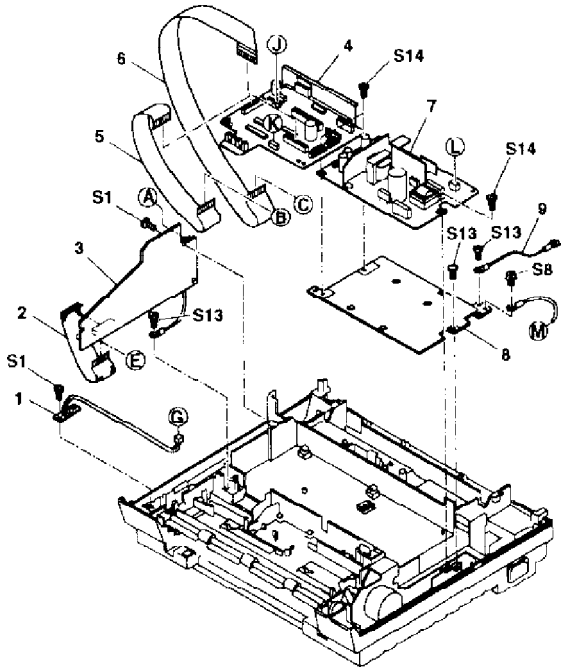

NUM.	PART #	DESCRIPTION
7-1	HG1-4090-000	RELAY BOARD ASSY
2	HH2-2348-000	FLAT CABLE
3	HG1-4085-000	NCU BOARD ASSY
4	HG1-4084-000	DRIVER BOARD ASSY
5	HH2-2512-000	FLAT CABLE
6	HH2-2511-000	FLAT CABLE
7	HH3-5269-000	POWER SUPPLY UNIT
8	HF5-0015-000	PLATE, GROUNDING
9	HH2-2342-000	CABLE WITH RING TONGUE

FIGURE 8 RECORDING PAPER GUIDE

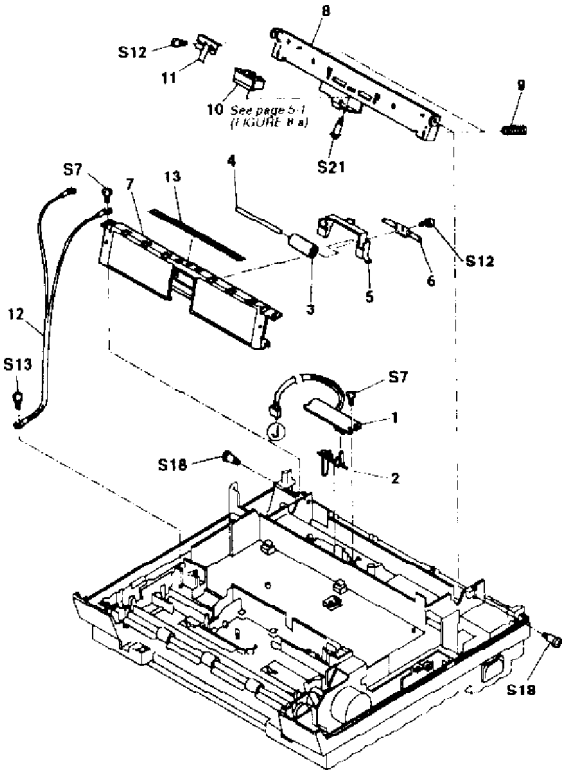

NUM.	PART #	DESCRIPTION
8-1	HG1-4087-000	SENSOR BOARD ASSY
2	HB1-0224-000	ARM, DETECTION
3	HB1-0400-000	ROLLER, BACK UP
4	HA1-6221-000	SHAFT, BACK UP ROLLER
S	HB1-0250-000	BRACKET
6	HB1-0248-000	SPRING, LEAF
7	HF5-0028-000	PAPER GUIDE UNIT
8	HB1-0254-000	PLATE, SEPARATION GUIDE
9	HS5-2012-000	SPRING, COIL (2)
19	HF5-0017-000	SEPARATION PAD UNIT
11	HB1-0255-000	SPRING, LEAP GROUNDING
12	HH2-2341-000	CABLE WITH RING TONGUE
13	HA1-6102-000	BRUSH, STATIC CHARGE

FIGURE 9 MAIN FRAME

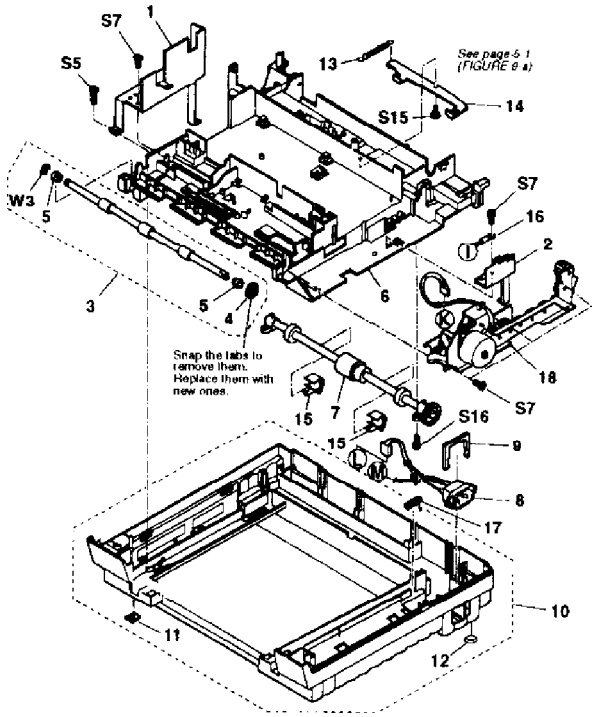

NUM.	PART #	DESCRIPTION
9-1	HF5-0101-000	GROUNDING PLATE UNIT
2	HB1-1129-000	PLATE, GROUNDING, RIGHT
3	HG5-0057-000	EJECT ROLLER ASSY
4	HS5-0024-000	GEAR, 21T
5	HS1-1063-000	BUSHING (2)
6	HB1-1118-000	FRAME, MAIN
7	HG5-0062-000	PICK-UP ROLLER ASSY
8	HH2-2359-000	CABLE WITH INLET
9	HB1-0216-000	PLATE, INLET STOP
10	HF5-0095-000	LOWER COVER UNIT
11	HB1-0317-000	FOOT, RUBBER
12	XH9-0091-000	RUBBER PAD (2)
13	HS5-2030-000	SPRING, COIL
14	HB1-0225-040	PLATE, PAPER RELEASE
15	HB1-1003-000	GUIDE, PAPER PICKUP (2)
16	HH2-2414-000	CABLE WITH CONNECTOR
17	HS5-2039-000	SPRING, CASSETTE PRESS
18	NPN	DRIVE ASSY

FIGURE 10 UPPER COVER

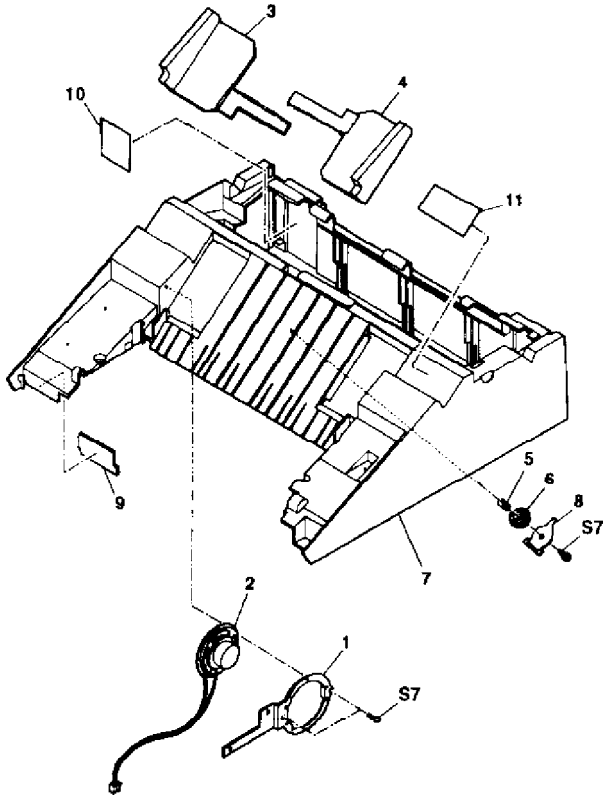

NUM.	PART #	DESCRIPTION
10-1	HB1-0311-000	PLATE, SPEAKER MOUNTING
2	HH7-2038-000	SPEAKER
3	HB1-0313-000	GUIDE, DOCUMENT, LEFT
4	HB1-0314-000	GUIDE, DOCUMENT, RIGHT
5	HS1-2143-000	SPRING STAINLESS
6	HS1-0253-000	GEAR, 16T (POM)
7	HB1-0310-080	COVER, UPPER
8	HB1-1002-000	PLATE, PRESSURE
9	HB1-1008-000	PAD, FOAM RUBBER
10	HB1-1030-020	INK ABSORBER
11	HA2-2727-000	LABEL, RECORDING PAPER CAUTION

FIGURE 11 OPERATION PANEL

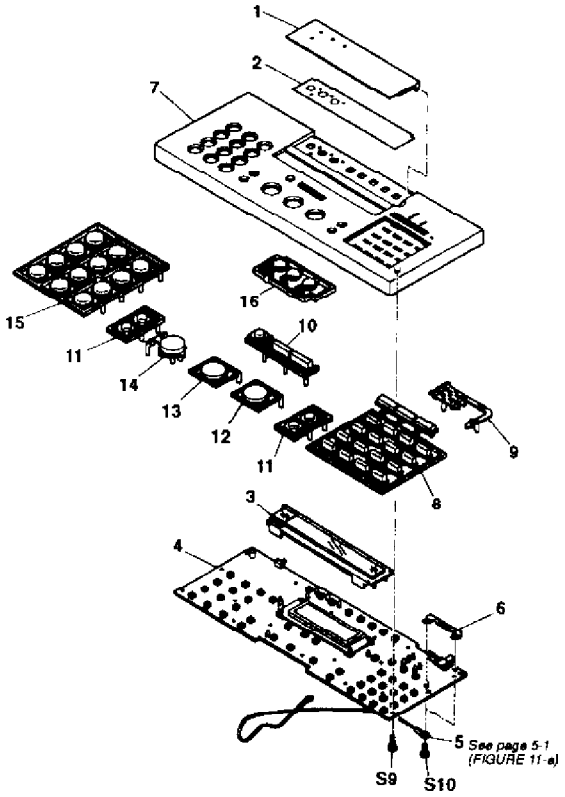

NUM.	PART #	DESCRIPTION
11-1	HB1-1188-000	COVER, BUTTON
2	HB1-1350-030	SHEET, OPERATION
3	HB1-1126-000	COVER, DISPLAY
4	HG1-4247-000	OPCNT BOARD ASSY
5	HH2-2345-000	CABLE WITH RING TONGUE
6	HB1-0290-000	PLATE, GROUNDING
7	HB1-1187-000	COVER, PANEL
8	HB1-0272-000	KEY TOP, “ONE TOUCH DIAL”
9	HB1-0277-000	COVER, LED
10	HB1-0273-000	KEY TOP, “SEARCH”
11	HB1-0274-000	KEY TOP, “FUNCTION” (2)
12	HB1-0269-000	KEY TOP, “START”
13	HB1-0282-000	KEY TOP, “STOP”
14	HB1-0346-000	KEY TOP, “ON HOOK”
15	HB1-0271-000	KEY TOP, “DIAL”
16	HB1-0275-000	KEY TOP, “PRINTER”

FIGURE 12 ADF UPPER

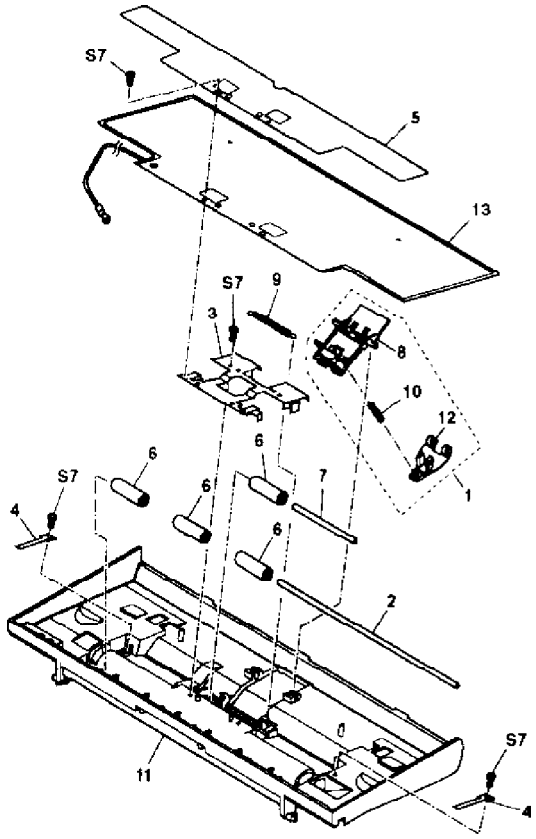

NUM.	PART #	DESCRIPTION
12-1	HG5-0454-000	SEPARATION GUIDE ASSY
2	HA1-6280-000	SHAFT, BACK UP ROLLER
3	HB1-0260-000	PLATE, PRESSURE
4	HB1-0261-020	PLATE, PRESSURE (2)
5	HB1-1651-000	SHEET, OPCNT INSULATOR
6	HB1-0400-000	ROLLER, BACK UP (4)
7	HA1-3066-000	SHAFT, BACK UP ROLLER
8	HF5-0098-000	SEPARATION GUIDE UNIT
9	HS5-2013-030	SPRING, COIL
10	HS5-2036-000	SPRING, COIL
11	HB1-0259-020	COVER, DOCUMENT GUIDE, UPPER
12	HB1-1121-000	ARM, SEPARATION GUIDE
13	HB1-0263-000	SHEET WITH CABLE, GROUNDING

FIGURE 13 SEPARATION ROLLER & FEED ROLLER

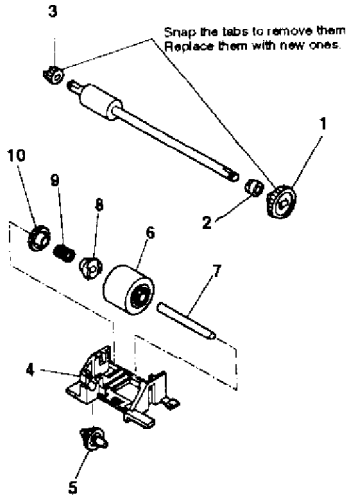

NUM.	PART #	DESCRIPTION
13-1	HS1-0283-000	GEAR, 28T
2	HS1-1063-000	BUSHING
3	HS5-0023-000	GEAR, 21T
4	HB1-0237-000	HOLDER, SEPARATION ROLLER
5	HS5-0039-000	GEAR, STEPPED
6	HB1-0235-000	ROLLER, SEPARATION
7	HB1-0236-020	SHAFT, SEPARATION ROLLER
8	HB1-0238-000	SPACER
9	HS5-2027-000	SPRING, CLUCH
10	HS5-0040-000	GEAR, 35T

FIGURE 14 PICKUP ROLLER

See page 5-2 (Figure 14-a)

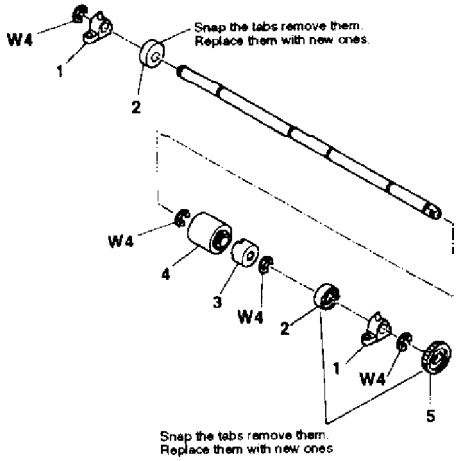

NUM.	PART #	DESCRIPTION
14-1	HS5-1007-000	BUSHING (2)
2	HB1-0258-000	ROLLER, SPACER (2)
3	HB1-0251-000	CLUTCH
4	HB1-0256-000	ROLLER, PICKUP
5	HS5-0033-000	GEAR, 31T

FIGURE 15 DRIVE GEARS

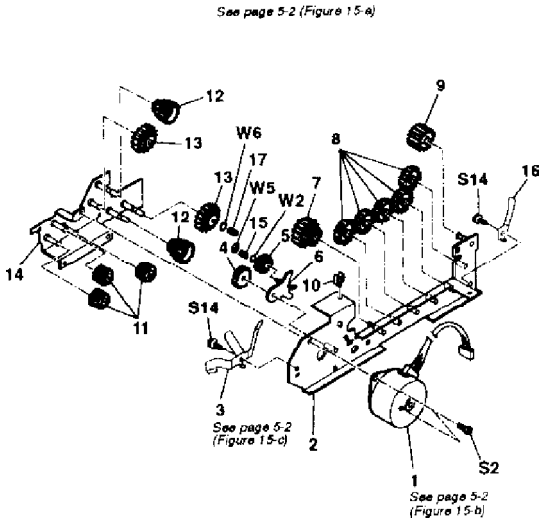

NUM.	PART #	DESCRIPTION
15-1	HH7-2037-000	PULSE MOTOR, READER
2	HF5-0013-020	PLATE, GEAR SHAFT, RIGHT
3	HB1-0247-000	PLATE, GROUNDING
4	HS5-0027-000	GEAR, 36T
5	HS5-0028-000	GEAR, 24T
6	HB1-0246-000	ARM, TRANSMISSION
7	HS5-0032-000	GEAR, STEPPED
8	HS5-0030-000	GEAR, 26T (5)
9	HS5-0031-000	GEAR, 23T
10	WT2-0434-000	CLIP
11	HS5-0029-000	GEAR, 16T (3)
12	HS5-0026-000	GEAR, STEPPED (2)
13	HS5-0025-000	GEAR, STEPPED (2)
14	HF5-0012-000	PLATE, GEAR SHAFT, LEFT
15	HS5-2011-000	SPRING, COIL
16	HB1-0292-000	PLATE, GROUNDING
17	HS5-2035-000	SPRING, COIL

FIGURE 16 PRINTER (1)

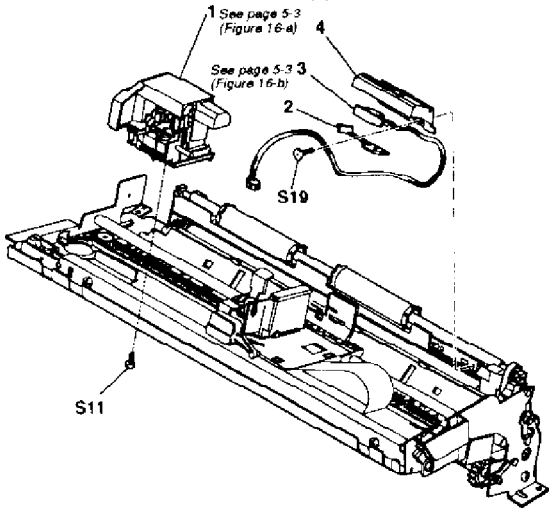

NUM.	PART #	DESCRIPTION
16-1	HG5-0072-000	PURGE UNIT
2	HB1-0300-030	COVER, FOOTER SENSOR
3	HG1-4108-000	SENSOR BOARD ASSY
4	HB1-0245-000	HOLDER, FOOTER SENSOR

FIGURE 17 PRINTER (2)

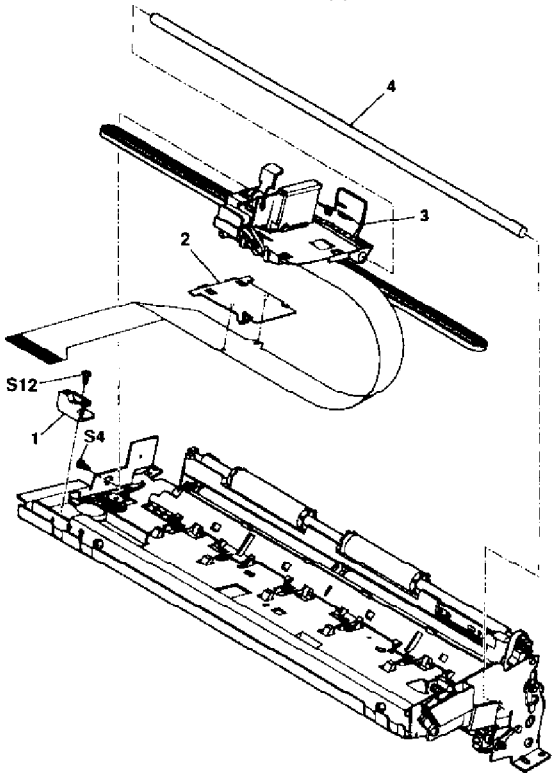

NUM.	PART #	DESCRIPTION
17-1	HB1-0286-020	GUIDE, CORNER
2	HB1-0105-000	HOLDER, CARRIAGE RIBBON CABLE
3	HG5-0153-000	CARRIAGE UNIT
4	HB1-0284-000	SHAFT, CARRIAGE

FIGURE 18 CARRIAGE (1)

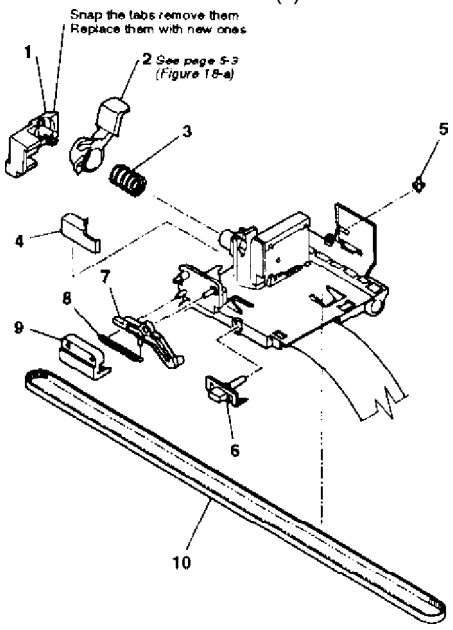

NUM.	PART #	DESCRIPTION
18-1	QB1-0440-000	COVER, HOOK
2	QB1-0437-000	LEVER, HOOKING
3	QB1-0439-000	SPRING, COIL
4	QB1-0438-000	HOOK, CARRIAGE
5	QB1-0443-000	WHEEL, CARRIAGE
6	HB1-0116-000	PINCARRIAGE
7	HB1-0117-000	ARM, CARRIAGE
8	HS5-2015-000	SPRING, HOOK AND COIL
9	HB1-0115-000	COVER, CARRIAGE TOP
10	QB1-0434-000	BELT, CARRIAGE

FIGURE 19 CARRIAGE (2)

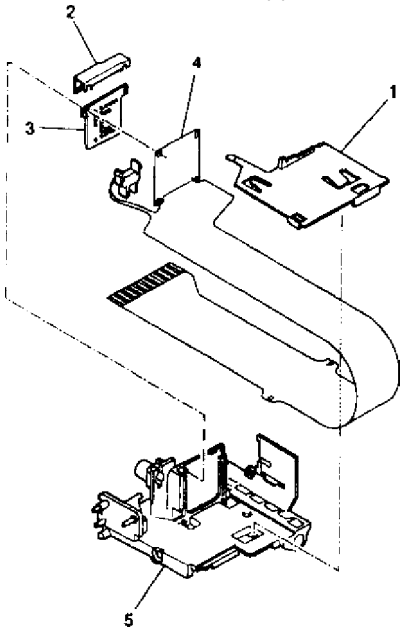

NUM.	PART #	DESCRIPTION
19-1	HB1-0114-000	GUIDE, RIBBON CABLE
2	QB1-0441-000	HOLDER, RIBBON CABLE (UPPER)
3	QB1-0436-000	PAD, CONTACT
4	HG1-4095-000	CARRIAGE RIBBON CABLE ASSY
S	HB1-0113-000	BASE, CARRIAGE

FIGURE 20 PAPER FEED SECTION (1)

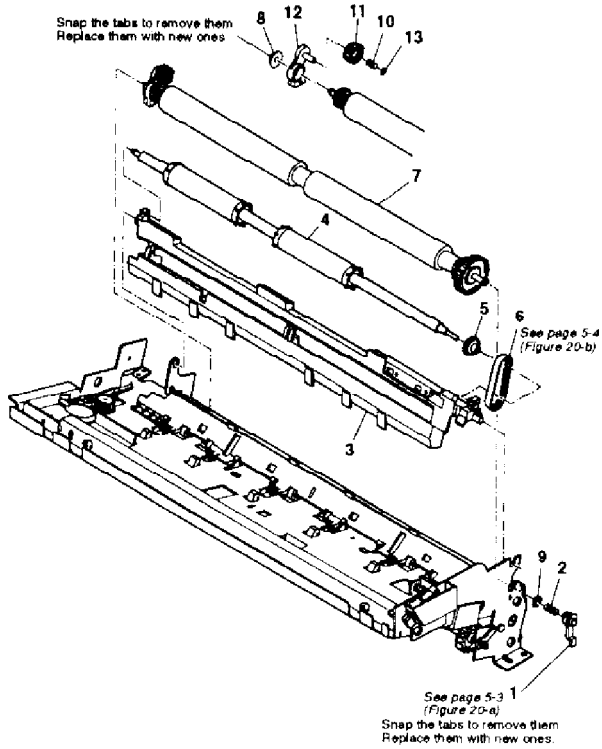

NUM.	PART #	DESCRIPTION
20-1	QB1-0417-000	BUSHING
2	QB1-0423-000	SPRING, COIL
3	HB1-0301-000	PLATEN
4	HB1-0299-000	ROLLER, PAPER EJECT
5	HS5-3004-000	PULLY
6	XF9-0485-000	BELT, TRANSMISSION
7	HG5-0075-000	PAPER FEED ROLLER ASSY
8	QB1-0422-000	BUSHING
9	QB1-0622-000	WASHER, PLAIN
10	QB1-0421-000	SPRING, COIL
11	QB1-0425-000	GEAR, TRANSMISSION
12	QB1-0420-000	ARM, TRANSMISSION
13	XA9-0613-000	NUT, SUS

FIGURE 21 PAPER FEED SECTION (2)

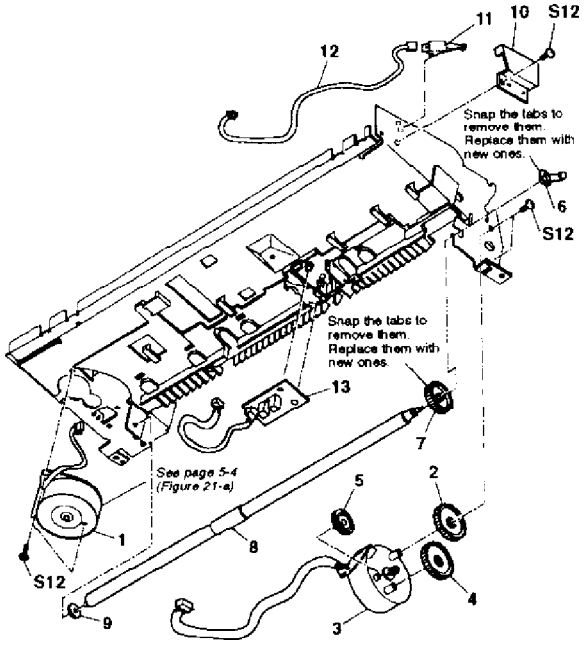

NUM.	PART #	DESCRIPTION
21-1	QH4-4038-000	MOTOR, CARRIAGE
2	QB1-0500-000	GEAR, SLOW DOWN
3	HH7-2036-000	MOTOR, PAPER FEED
4	HS5-0034-000	GEAR, STEPPED
5	HS5-0036-000	GEAR, IDLER
6	QB1-0417-000	BUSHING
7	HS5-0035-000	GEAR, 24T
8	HB1-0287-000	ROLLER, PAPER PEED
9	QB1-0422-000	BUSHING
10	HB1-0372-000	COVER, SENSOR
11	WC4-5052-000	MICRO SWITCH
12	HH2-2358-000	CABLE WITH CONNECTOR, 2P
13	HG1-4088-000	SENSOR BOARD ASSY

FIGURE 22 CARRIAGE GUIDE & PRESSURE PLATE

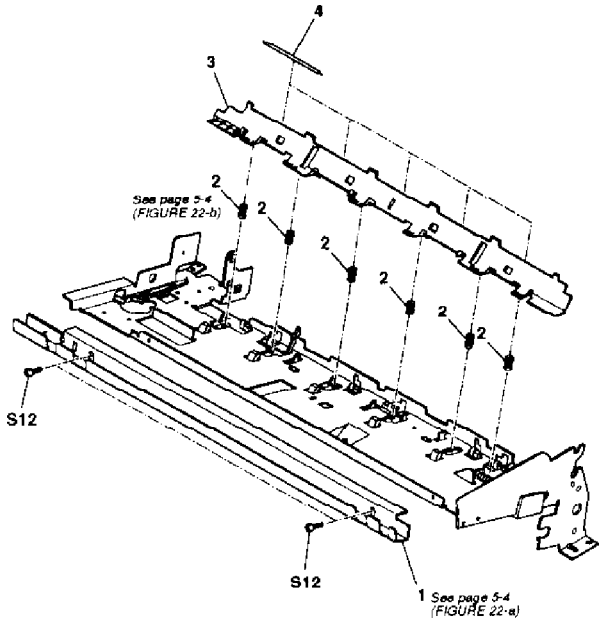

NUM.	PART #	DESCRIPTION
22-1	HB1-0288-000	FRAME, CARRIAGE GUIDE
2	HS5-2035-000	SPRING, COIL (6)
3	HB1-0289-000	PLATE, PRESSURE
4	QB1-0684-000	ROLLER, PRESSURE (5)

FIGURE 23 PRINTER FRAME

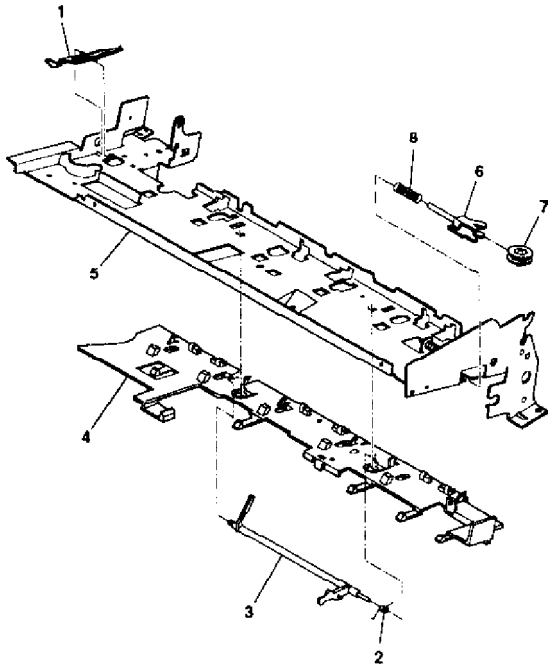

NUM.	PART #	DESCRIPTION
23-1	QB1-0413-000	ARM, SENSOR
2	QB1-0412-000	SPRING, TORSION
3	QB1-0411-000	ARM, PAPER SENSOR
4	HB1-0302-000	GUIDE, PRESSURE PLATE
5	HB1-0285-000	FRAME, PRINTER
6	QB1-0501-020	ROLLER, IDLER
7	QB1-0502-000	BRACKET, IDLER
8	QB1-0503-000	SPRING, COIL

FIGURE 24 RECORDING PAPER CASSETTE

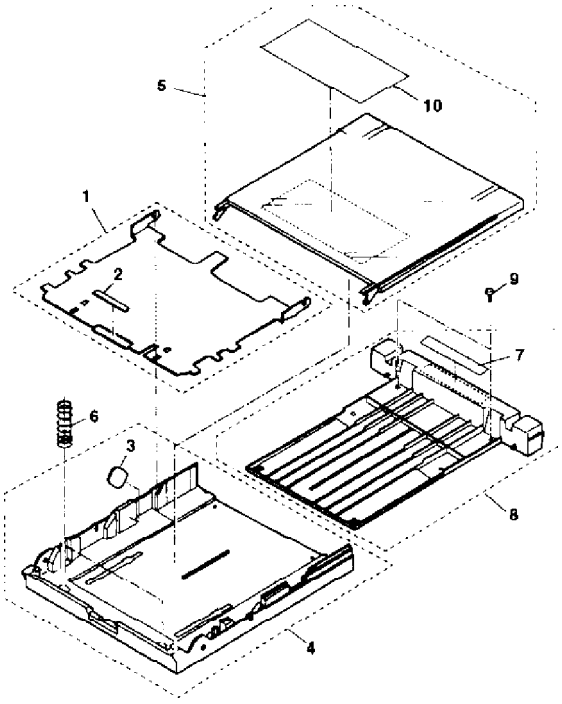

NUM.	PART #	DESCRIPTION
24 -1	HF5-0097-000	PAPER LIFTING PLATE UNIT
2	HB1-0306-000	SHEET, FRICTION
3	HB1-1133-000	VELCRO PAD
4	HF5-0100-000	FRAME, CASSETTE
5	HF5-0135-000	CASSETTE COVER UNIT
6	HS5-2038-000	SPRING, PAPER LIFTING (2)
7	HB1-1404-000	LABEL, CASSETTE PULL OUT
8	HF5-0134-000	CASSETTE EXTENSION
9	XA9-0587-000	SCREW, M3X8 (2)
10	HA2-2730-000	LABEL, RECORDING PAPER SET

FIGURE 25 FUSE, POWER SUPPLY

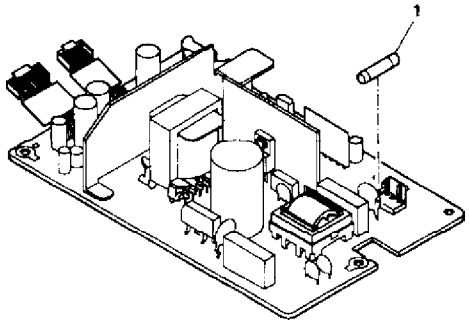

NUM.	PART #	DESCRIPTION
25-1	HY7-2608-000	FUSE, 3.15A 125V

FIGURE 26 SCNT BOARD ASS'Y

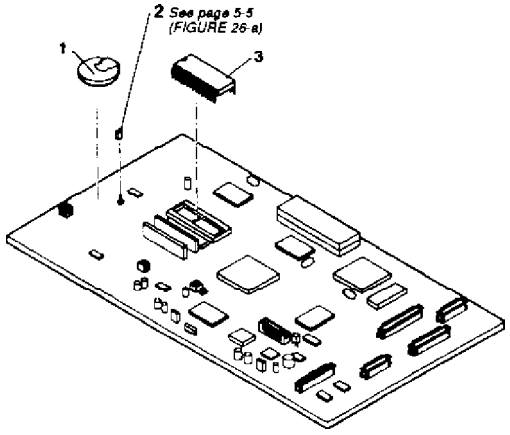

NUM.	PART #	DESCRIPTION
26-1	WK1-5047-000	LITHIUM BATTERY, CR2450HC22NC
2	WS1-0172-000	PLUG, SHORT
3	HH4-2565-000	IC, M27C4001-12F1, EPROM

FIGURE 27 HANDSET

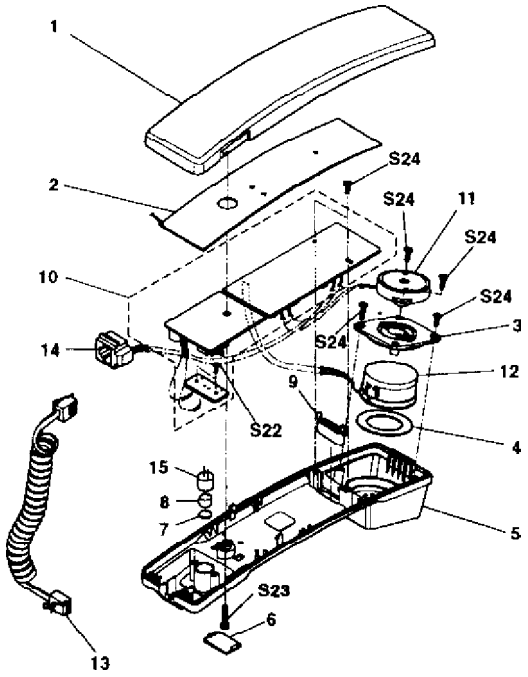

NUM.	PART #	DESCRIPTION
27-1	HA1-6141-000	COVER, UPPER (AG)
2	HA1-5412-000	PLATE, NOISE SHIELD (CT-15)
3	HA1-4279-000	HOLDER, SPEAKER
4	HA1-3185-000	SEAL, RUBBER
5	HA1-6142-000	COVER, LOWER (AG)
6	HA1-6143-000	COVER, SCREW (AG)
7	HA1-3002-000	FILTER B, MECHANICAL
8	HA1-3001-000	FILTER, MECHANICAL
9	HA1-6144-000	KEY TOP F (AG)
10	HG1-2196-000	TELCNT BOARD ASSY
11	HH7-1299-000	RINGER PKM34EW-12
12	WR1-0111-000	SPEAKER DH-70C
13	HH2-1703-000	CORD, COILED (AG)
14	HH2-1277-000	MODULAR JACK
15	WR1-0086-000	MICROPHONE

FIGURE 28 FXB-CASSETTE 3
A4/200 PACKAGE CONTENTS

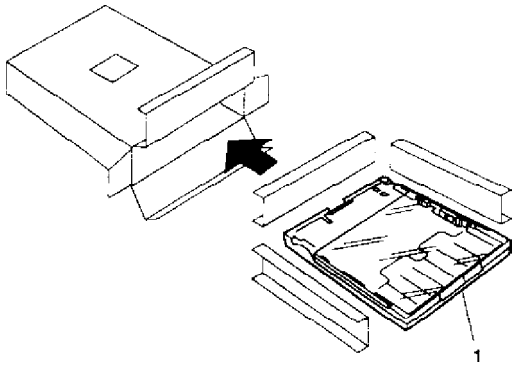

NUM.	PART #	DESCRIPTION
28-1	NPN	RECORDING PAPER CASSETTE (A4)

FIGURE 29 FXB-CASSETTE 3
A4/200 RECORDING PAPER CASSETTE

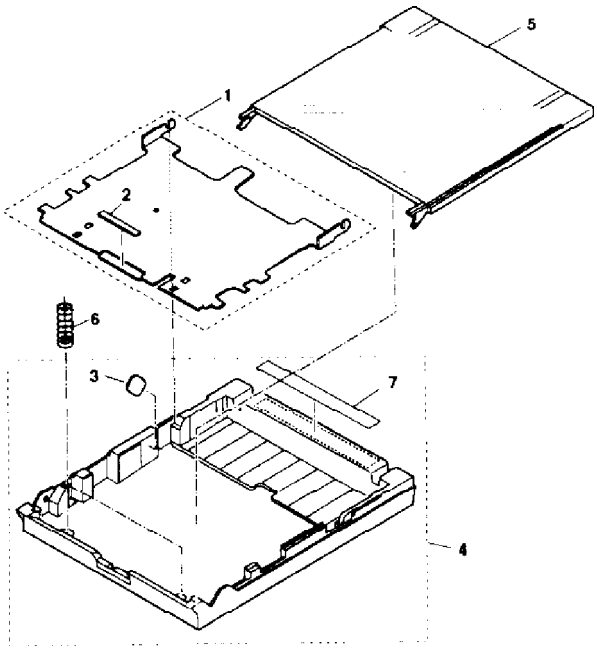

NUM.	PART #	DESCRIPTION
29 -1	HF5-0097-000	PAPER LIFTING PLATE UNIT
2	HB1-0306-000	SHEET, FRICTION
3	HB1-1133-000	VELCRO PAD
4	HF5-0099-000	CASSETTE FRAME UNIT
5	HB1-1125-000	COVER, CASSETTE
6	HS5-2038-000	SPRING, PAPER LIFTING (2)
7	HB1-1405-000	LABEL, “CASSETTE PULL OUT”

NUM.	PART #	DESCRIPTION